

## 83–645 Removal and installation of ambient temperature sensor

---

### Data

---

|                             |                  |
|-----------------------------|------------------|
| Resistance at 20 °C (68 °F) | nominal 363 ohms |
| ambient temperature         | max. 388 ohms    |
|                             | min. 337 ohms    |


---

### Removal

---

- 1 Pull off electrical plug (62) while paying attention to safety hooks.
- 2 Unscrew two screws (63) and pull ambient temperature sensor (8) out of front wall.

8 Ambient temperature sensor  
62 Electrical plug  
63 Screw

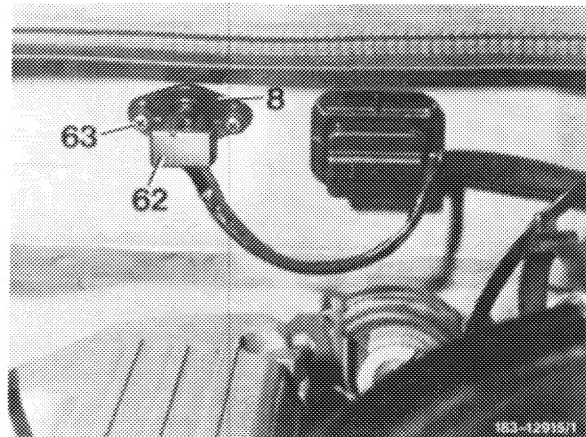


### Installation

---

- 3 Test ambient temperature sensor (8) with ohmmeter (83–609).
- 4 Attach ambient temperature sensor (8) with screws (63) to front wall and plug on electrical plug (62).

8 Ambient temperature sensor

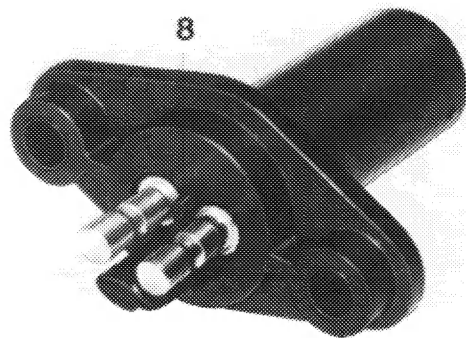

83-11334